

ASSEMBLY INSTRUCTION

LV423.B61 - DRESSER 6 DRWS

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have come loose inside carton during shipment. Identify and count all parts and compare with the parts list below.

ASSEMBLY INSTRUCTION :

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior start of assembly.
3. Please follow attached instruction in the same sequence as numbered to assure fast and easy assembly



WARNING !

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.
3. Two persons are required for assembly.
4. Approximate assembly time : 1/2 hours.
5. Component parts and fittings contained in the box.

Please sort out all parts before you begin to assemble the item.


This is to make sure you always use the correct part .

6. It is **STRONGLY RECOMMENDED** that you **ANCHOR** this product .

Toppling furniture can cause serious injuries and death.

This product has not been fitted with an anchor strap.

To prevent your furniture from tipping forward it is strongly recommended that you securely attach this product to a wall or other solid surface, using the anchor straps provided and appropriate fixings.

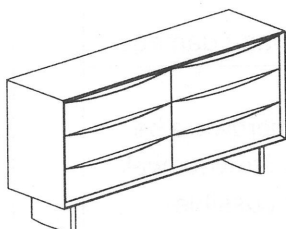


No.	Component	Q'ty
Ⓐ	 Base	1
Ⓑ	 Legs	2
Ⓒ	 Center leg	1

No.	Hardware list	Q'ty
①	 Bolts M6x25	16
②	 Lock washers Ø6	16

No.	Hardware list	Q'ty
③	 Flat washers Ø6	16
④	 Allen key K4	1

Step 1

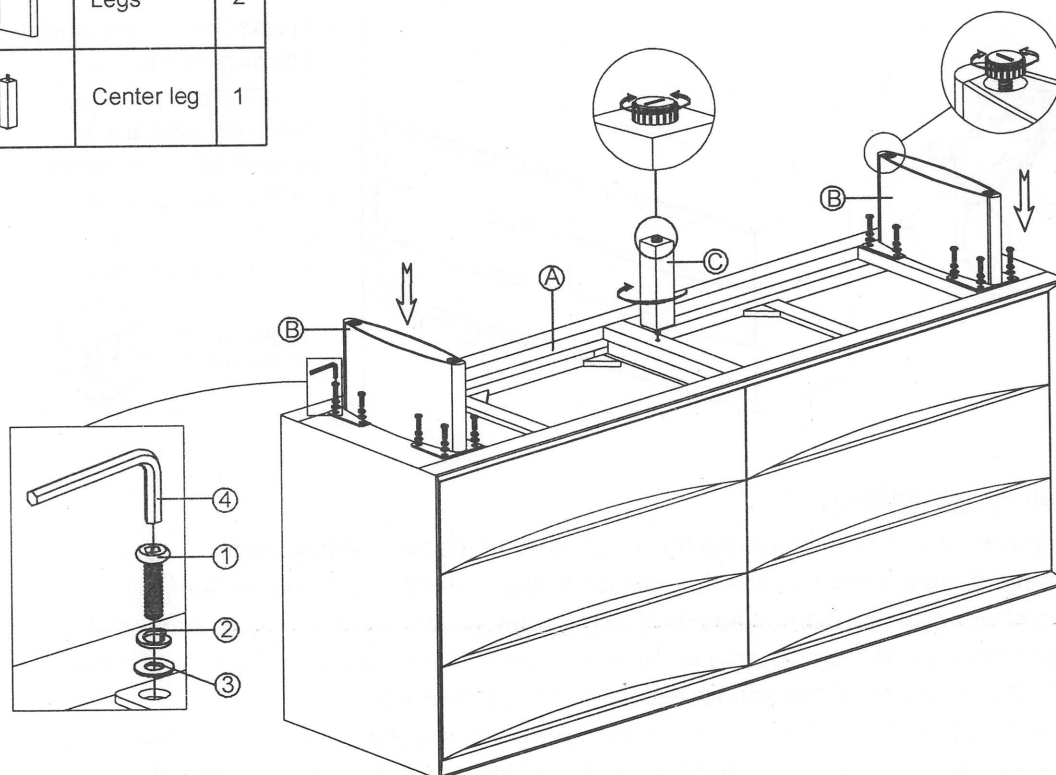

FURNITURE TIPPING RESTRAINT

WARNING

Injury May Result From Tipping Furniture

This restraint is not a substitute for proper adult supervision.

This restraint may provide protection against tipping furniture.

Do not allow children to climb on furniture.

Failure to detach this restraint before moving furniture may result in injury and damage.

▲ IMPORTANT Wall Mounting Instructions

For added safety and stability, it is recommended that the wall mounting hardware be installed. For safe mounting, it is essential to use wall anchors appropriate to your wall type (i.e. plaster, drywall, concrete, etc.). Mount to wood studs whenever possible.



Note: If you are unsure about your wall type or what mounting method you should use, consult a qualified professional or your local hardware store.

Step 2: Finish


No.	Hardware list	Q'ty
①	 Anti-tip kits	2
②	 Screws M4 x 20	4

No.	Hardware list	Q'ty
③	 Screws M4 x 35	4
④	 Wall plugs	4

Drill on the wall and add screw with bracket

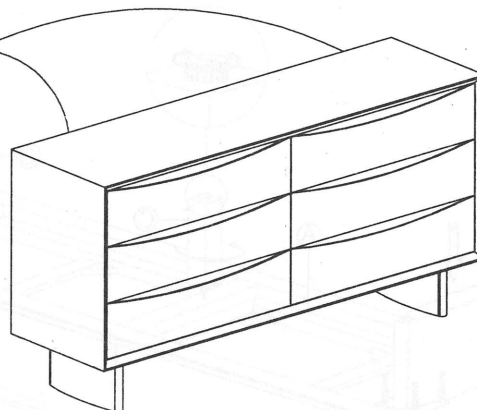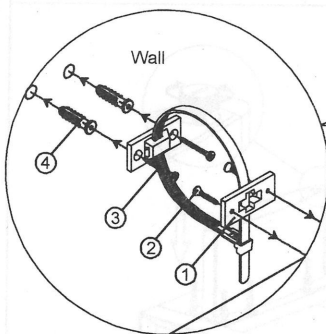

WARNING

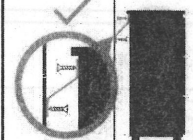

Children have died from furniture tipover.

- ALWAYS secure this furniture with an anchor device.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heavy items down low.

NEVER put a TV on this furniture



Installation Instructions:

1. One tip restraint is recommended for all furniture items over 500mm high.
2. We have already attached one tip restraint to the back of your furniture item.
3. Included with this tip restraint attached to the back of your furniture, is an additional screw and plastic wall plug suitable for masonry walls. If your wall is suitable, use these to attach the other end of the anti-tip restraint strap to your wall.
4. IMPORTANT NOTE: If this included hardware is not suitable for your wall design, consult a qualified professional or your hardware store for an alternative wall attachment hardware.