




ASSEMBLY INSTRUCTIONS

ANDERS BEDSIDE L566x W418 x H500 mm

1		Bolt M6x15	12 pcs
2		Allen Wrench M4	1 pc



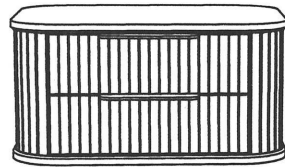


A x 1






B x 4

STEP 1

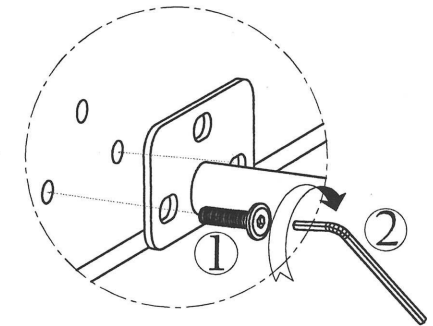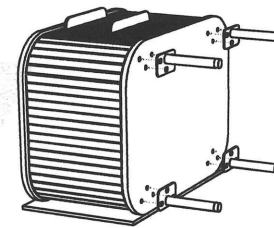

STEP 2

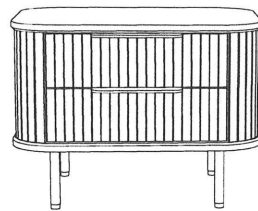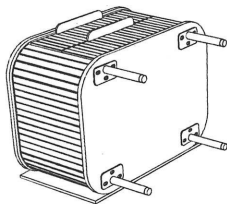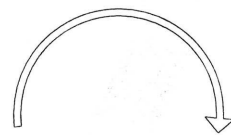

FINISH!

