




ASSEMBLY INSTRUCTIONS

ANDERS TALLBOY L786x W458 x H1150 mm

1		Bolt M6x15	12 pcs
2		Allen Wrench M4	1 pc



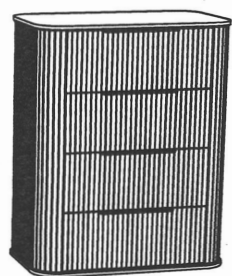


A x 1






B x 2

STEP 1

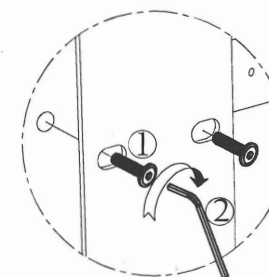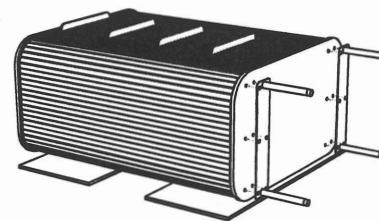

STEP 2

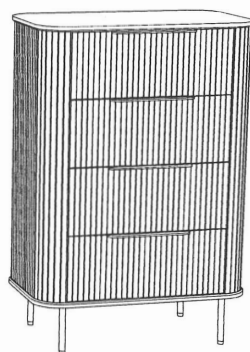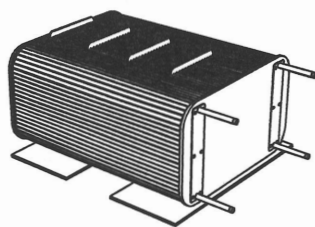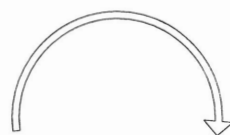

FINISH!

